

# **PAN/TILT Wireless IP Camera ZN-PT304WL**

## **Quick Installation Guide**

This guide describes the basic functions of ZN-PT304WL.  
All detailed information is described in the User's Manual.





## Warning Before Install

- Power off the IP Camera as soon as it is found smoking or smelt unusual.




Contact your distributor when such cases happen.

- Keep the IP Camera away from the water. If the IP Camera is wet, power off immediately.



Contact your distributor when such cases happen.

- Do not place the IP Camera around the heat sources, such as television or oven.

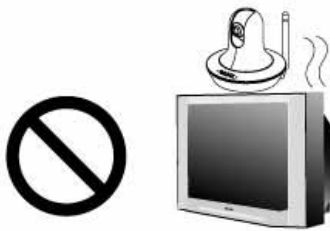

- Keep the IP Camera away from the direct sunlight.




- Refer to your user's manual for the operating temperature.



- Do not place the IP Camera in high humid environments.




- Do not place the IP Camera on unsteady surfaces.

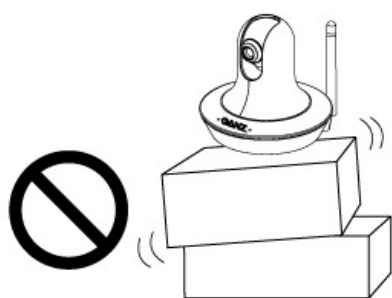


- Do not touch the IP Camera when it's lightning.



- Do not disassemble the IP Camera.

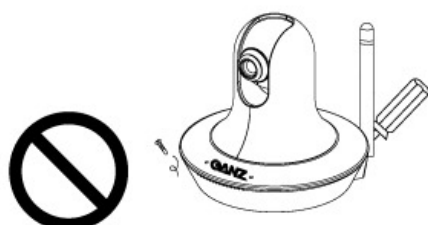

- Do not drop the IP Camera.

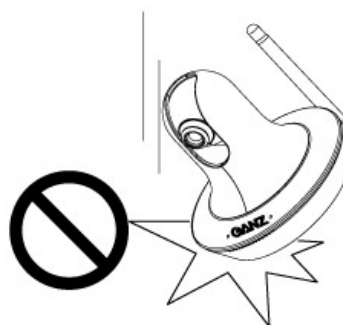

- Do not insert any object into the IP Camera, such as needles.



# 1 Check Package Contents


## ● ZN-PT304WL



## ● Power Adapter



## ● Camera Mount Kit & Pads

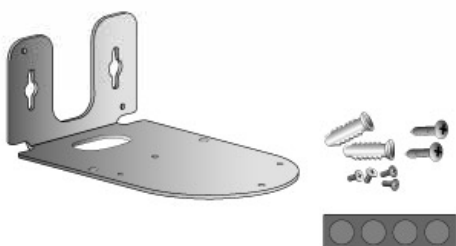

## ● Antenna



## ● Software CD



## ● Quick Installation Guide




## ● Warranty Card




## 2 Physical Description

### ● Front

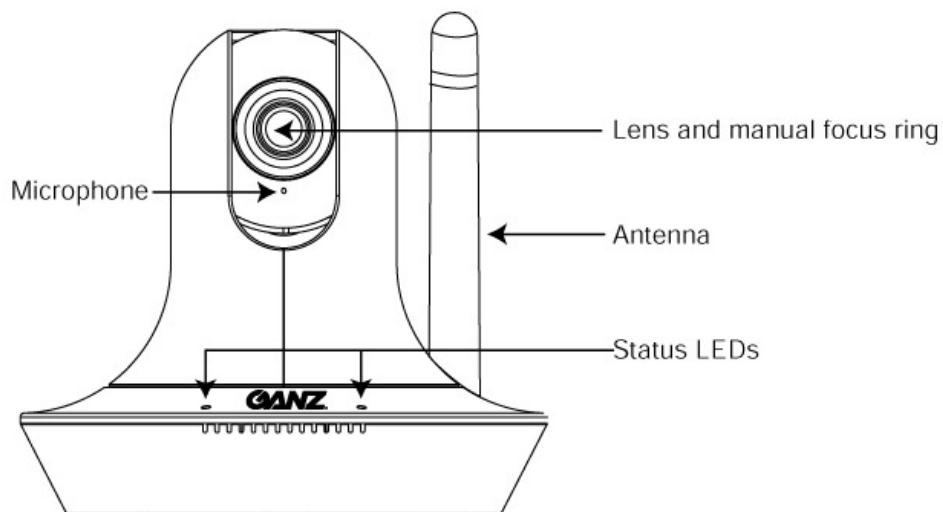

### ● Rear

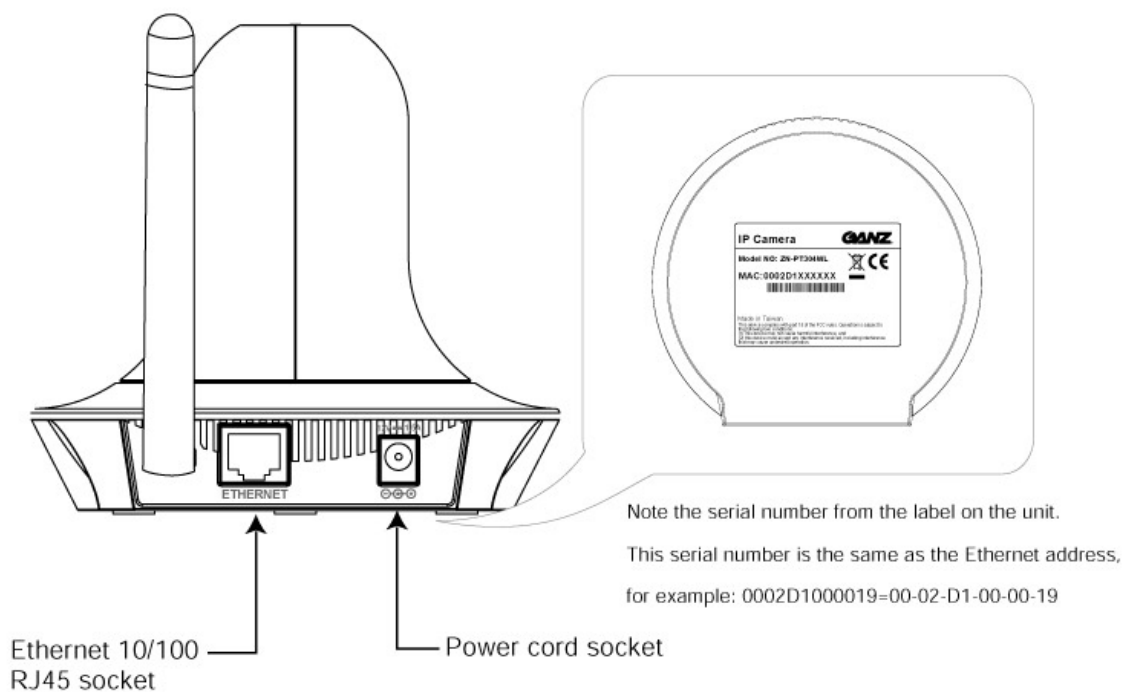

### 3

## Mounting the Camera

### ● Ceiling Mount

1. Fix the camera to the bracket with the two supplied screws.




2. Fix the bracket and camera to the ceiling using the two screws and hollow wall anchors.




## ● Wall Mount

1. Fix the bracket to the wall using the two screws and hollow wall anchors.

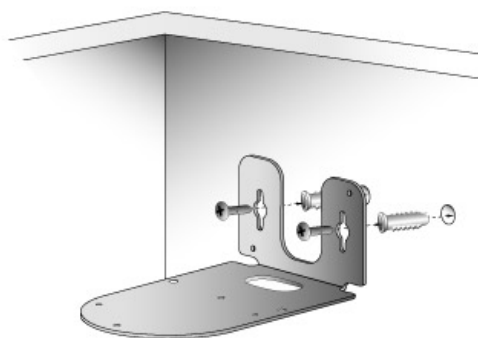


2. Fix the camera to the bracket with the two supplied screws.

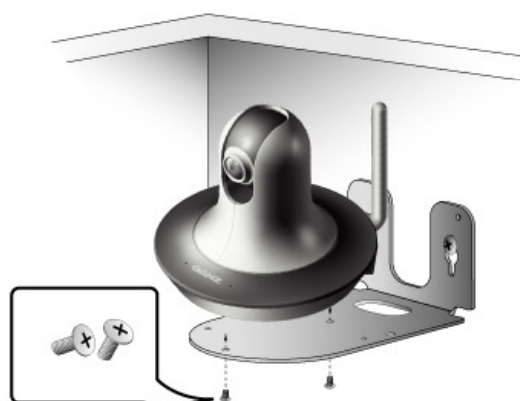

## 4

## Install Your IP Camera in Ethernet Network

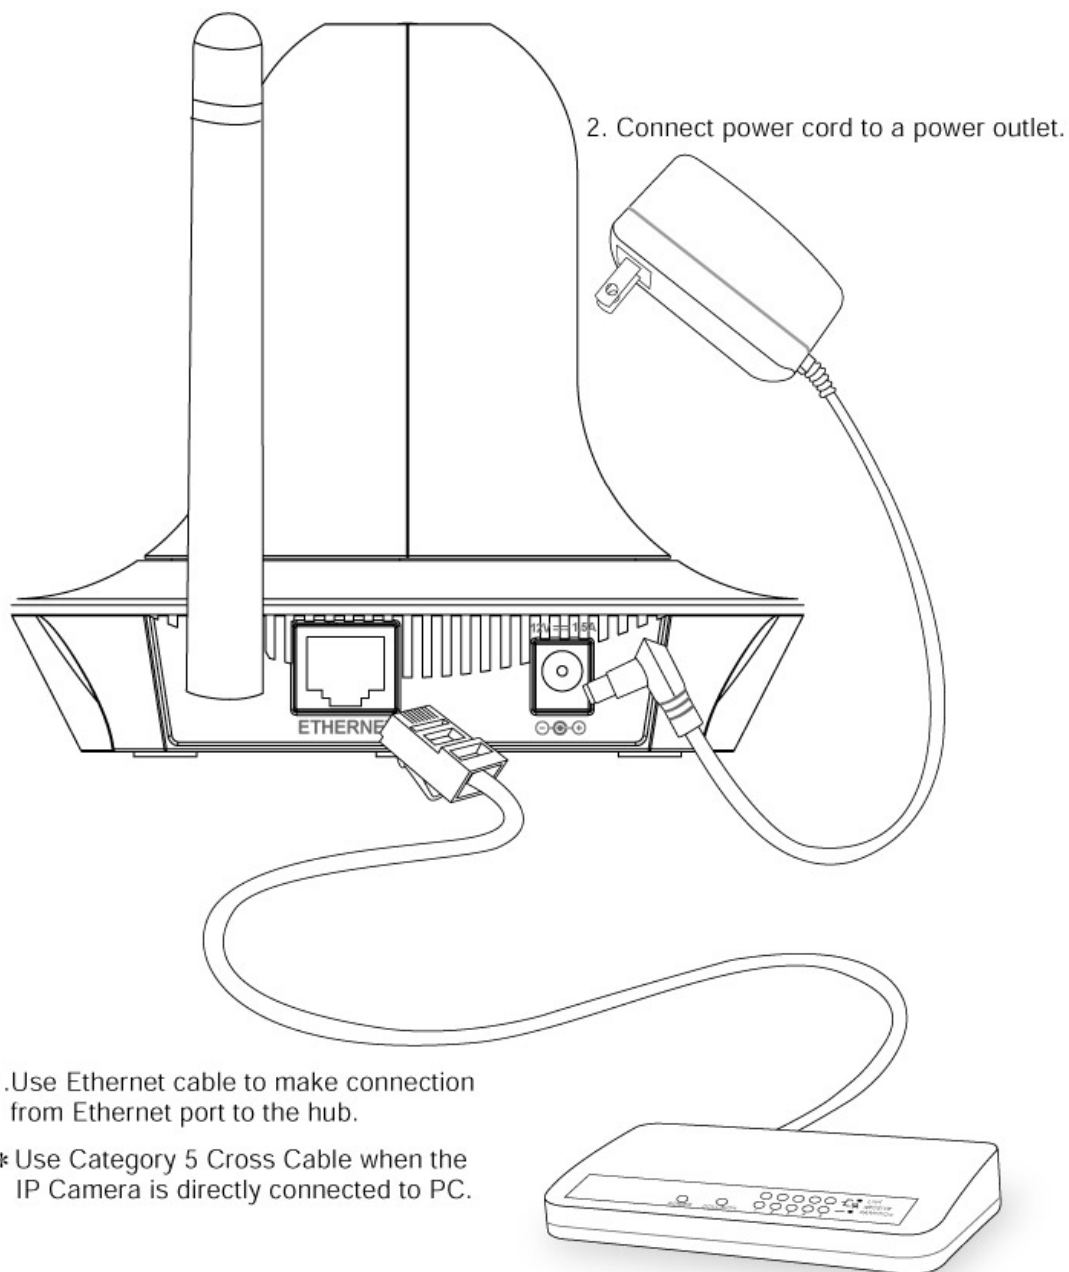



## 5 Assign IP Address

- 1.Run the "Installation Wizard" under the Software Utility directory from software CD.
- 2.The program will search the servers or cameras on the same LAN.



- 3.After searching, the main installer window will pop up. Click on serial number that matches the one you just noted from **2 Physical description**



- 4.Click "Link to selected device(s)" to connect the Internet Explorer to the IP Camera.

\* If there is no DHCP server on the LAN, please refer to the user's manual for the methods of assigning an IP address.

## 6 The Internet Explorer Connects to the IP Camera



## 7



## Set up Your Wireless Configuration for the IP Camera

1. Check the SSID currently set on your wireless access point (AP).
2. Go to ZN-PT304WL's **Configuration > Wireless LAN**

3. Type in the SSID consistent with the setting on your AP.

4. Select the Wireless mode as "Infrastructure".

5. Click **Save**

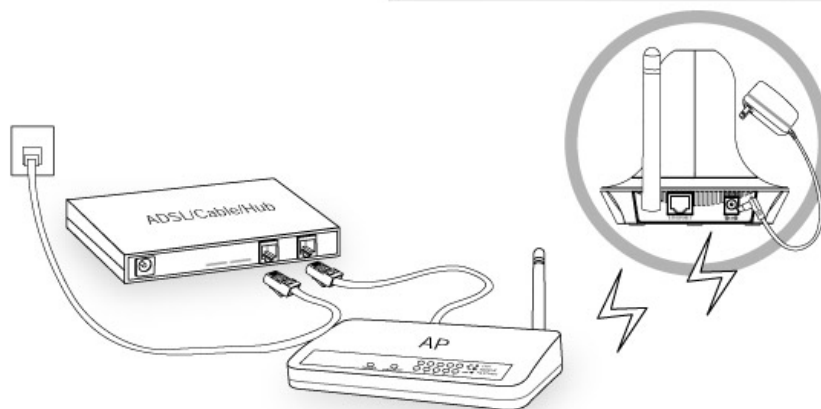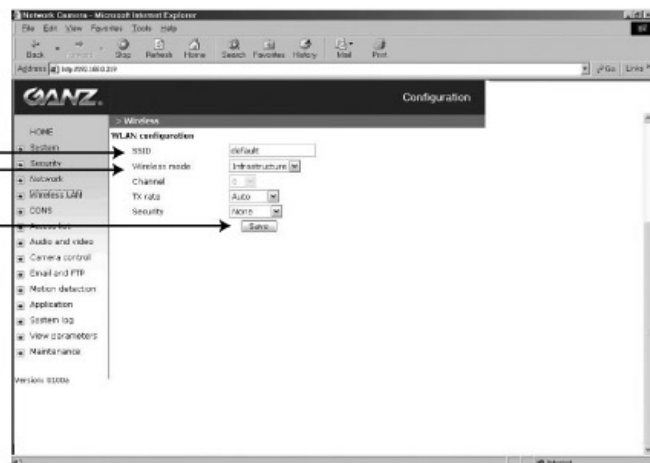

### Note:

1. SSID abbreviated from Service Set Identifier is the name assigned to the wireless network. The ZN-PT304WL's factory SSID setting is set to "default".
2. Select "Ad-Hoc" wireless mode if you want the ZN-PT304WL to communicate without using an AP or wireless router.

For setup further configuration, please check user's manual on the software CD.