

PT110-IP


Indoor Vandal Resistant 10x IP PTZ Dome

User Manual



CBC (AMERICA) Corp.

NY: 55 Mall Drive • Commack, NY 11725 (800) 422-6707
CA: 20521 Earl Street • Torrance, CA 90503 (800) 888-0131
www.computarganz.com

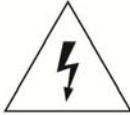

CAUTION
RISK OF ELECTRIC
SHOCK DO NOT OPEN



Warning: Do not open the case and disassemble the product. No user serviceable parts included. Please contact authorized service agent.



This lightning flash with arrowhead symbol is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This exclamation point symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING : TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS CAMERA TO RAIN OR MOISTURE.



Important Safeguard

1. Read Instructions

Read all of the safety and operating instructions before using the product.

2. Retain Instructions

Save these instructions for future reference.

3. Attachments / Accessories

Do not use attachments or accessories unless recommended by the appliance manufacturer as they may cause hazards, damage product and void warranty.

4. Water and Moisture

Do not use this product near water or moisture.

5. Installation

Do not place or mount this product in or on an unstable or improperly supported location. Improperly installed product may fall, causing serious injury to a child or adult, and damage to the product. Use only with a mounting device recommended by the manufacturer, or sold with the product. To insure proper mounting, follow the manufacturer's instructions and use only mounting accessories recommended by manufacturer.

6. Power source

This product should be operated only from the type of power source indicated on the marking label.

Precautions

Operating

- Before using, make sure power supply and others are properly connected.
- While operating, if any abnormal condition or malfunction is observed, stop using the camera immediately and then contact your local dealer.

Handling

- Do not disassemble or tamper with parts inside the camera.
- Do not drop or subject the camera to shock and vibration as this can damage camera.
- Care must be taken when you clean the clear dome cover. Scratches and dust will ruin the image quality of your camera.

Installation and Storage

- Do not install the camera in areas of extreme temperatures in excess of the allowable range.
- Avoid installing in humid or dusty places.
- Avoid installing in places where radiation is present.
- Avoid installing in places where there are strong magnetic fields and electric signals.
- Avoid installing in places where the camera would be subject to strong vibrations.
- Never expose the camera to rain and water.



① Introduction	
Features	7
Product & Accessories	9
Parts Name & Functions	10
② Installation	
DIP Switch Setup	13
Direct Installation on the Ceiling	16
Installation using Pendant Mount Bracket	17
Installation using Wall Mount Bracket	18
Installation using Flush Mount Bracket	19
Cabling	20
③ Operation	
Check Points before Operation	23
Preset and Pattern Function Pre-Check	23
Starting OSD Menu	24
Reserved Preset	24
Preset	25
Swing	25
Pattern	26
Group	27
Other Functions	28
OSD Display of Main Screen	29



④ How to use OSD Menu	
General Rules of Key Operation	31
Main Menu	31
Display Setup	32
Privacy Zone Mask Setup	33
Camera Setup	34
Motion Setup	36
Preset Setup	38
Swing Setup	39
Pattern Setup	40
Group Setup	41
System Initialize	43
⑤ Remote Video Monitoring	
Remote Video Monitoring	45
Initialize IP address	47
IP finder in remote client	48
IP Finder Configuration	49
Use Internet Explorer	50
System	51
Video	52
Audio	54
Network	55
Serial	57
Event	58
Preset	59
User	60
⑥ Specifications	
Specifications	63
Dimension	65

Chapter 1.

INTRODUCTION



Features

□ Camera Specifications

- CCD Sensor : 1/4" Interline Transfer CCD
- Zoom Magnification : × 10 Optical Zoom, × 10 Digital Zoom (Max × 100 Zoom)
- Day & Night Function
- Various Focus Mode : Auto-Focus / Manual Focus / Semi-Auto Focus.
- Independent & Simultaneous Camera Characteristic Setup in Preset operation

□ Advanced Pan/Tilt Functions

- Max. 360°/sec high speed Pan/Tilt Motion
- Using Vector Drive Technology, Pan/Tilt motions are accomplished with the shortest path. As a result, time to target view is reduced dramatically and the video stream transfers are natural to watch.
- For jog operation using a controller, an ultra slow speed of 0.05°/sec can be reached, making it very easy to relocate camera to the desired target view. Additionally, it is easy to move the camera to a desired position with zoom-proportional pan/tilt movement.

□ Preset, Pattern, Swing, Group, Privacy Mask and More...

- Max. 127 Presets are assignable and characteristics of each preset can be set up independently, such as White Balance, Auto Exposure, Label and so on.
- Max. 8 set of Swing actions can be stored. This enables camera to move automatically between two preset positions at a designated speed.
- Max. 4 Patterns can be recorded and played back. This enables camera to automatically follow any trajectory preset by joystick as closely as possible.
- Max. 8 set of Group action can be stored. This enables camera to move automatically with a combination of Preset or Pattern or Swing. A Group is composed of max. 20 entities of Preset/Pattern/Swings.
- Privacy Masks are assignable, so as not to intrude on other's privacy. (4 Privacy Zones)

□ PTZ (Pan/Tilt/Zoom) Control

- With RS-485 communication, max. of 255 cameras can be controlled at the same time.
- Pelco-D or Pelco-P protocol can be selected as a control protocol in the current firmware version.

**❑ OSD (On Screen Display) Menu**

- OSD menu is provided to display the status of camera and to configure the functions interactively.
- The information such as Camera ID, Pan/Tilt Angle, Alarm Input and Preset can be displayed on screen.

❑ Alarm I/O Functions(Analog Only)

- 4 alarm sensor Inputs are available.
- To completely eliminate external electric noise and shock, alarm sensor Input is decoupled from photo coupler.
- If an external sensor is activated, camera can be set to move to the corresponding Preset position.

❑ Reserved Presets for Special Purpose

- Most camera characteristics can be set up easily and directly with reserved preset, without entering the OSD menu. For more information, refer to "Reserved Preset" in this manual.

❑ Audio

- Various Transmission Mode : Unidirectional Mode (IP-server to Client PC / Client PC or Decoder to IP-server), Bi-directional Mode

❑ Video

- High-Quality Compression Algorithm, H.264
- Compression into Various Resolution : CIF, Half-D1, D1
- Wide Range of Video Transmission Rate : 32kbps ~ 4Mbps
- Various Transmission Mode : CBR, VBR
- Motion Detection

❑ Network

- Static IP and Dynamic IP(DHCP, PPPoE) Support
- One to One Connection and One to Multiple Connection
- Multi-Casting
- Automatic Transmission Rate Control by Network Condition

❑ User Interface

- System Status Display with OSD(On Screen Display)
- System Configuration via Internet Explorer

❑ Reliability


- Reliable Embedded System
- System Recovery with Dual Watch-Dog Function

Product & Accessories

□ Product & Accessories



● Main Body

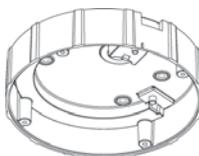


● Surface Mount Bracket




● Screws & Terminal Block



● Lan Cable

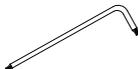


● Wrench

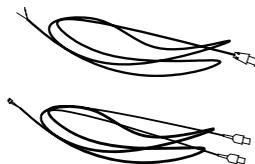

● Audio Cable & Video Cable


□ Options

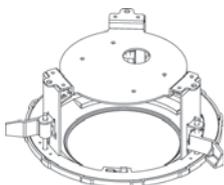

● Flush Mount Bracket




● Pendant Mount Bracket

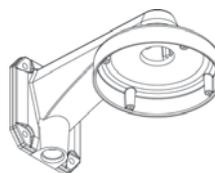

● Wall Mount Bracket

Parts Name & Functions

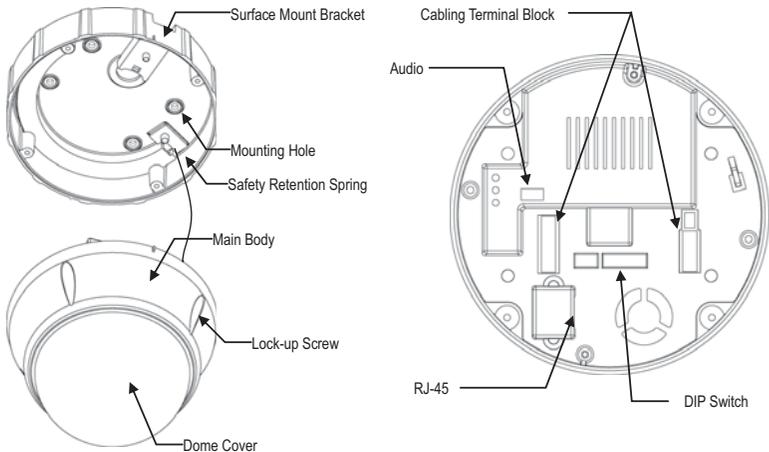

Main Unit / Surface Mount Bracket

- Dome Cover
- Surface Mount Bracket
- Lockup Screw
- Cabling Terminal Block
- Fall-Proof Spring

Do not remove protective vinyl from dome cover before finishing all installation processes to protect dome cover from scratches or dust.

Used to install the camera directly on the ceiling. Separate the cover first and then attach it directly to ceiling. Camera must be assembled at the last stage.


Do not use this bracket when installing camera on the wall with wall mount bracket or on the ceiling with pendant mount bracket.

Fixes main unit to surface mount bracket.

During installation, Power, Video, Communication, Alarm Input cables are connected on to this cabling terminal block.

Pull out from Surface Mount Bracket and connect to Main Body hook.

Back of Main Unit

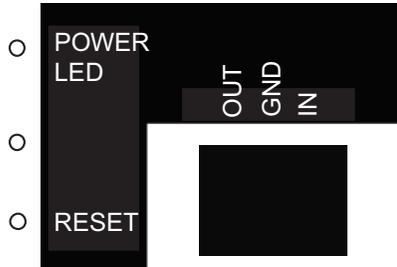

- **Reset Button** Reboot the network function when it is NOT working properly.
- **Power LED** Illuminates in bright red when the power is supplied to the unit.
- **Audio Connection** Connect to a speaker, MIC, and Ground Wire with an appropriate wire.


Chapter 2.

INSTALLATION




DIP Switch Setup

Before you install the camera, you should set the DIP switches to configure the camera ID and communication protocol.

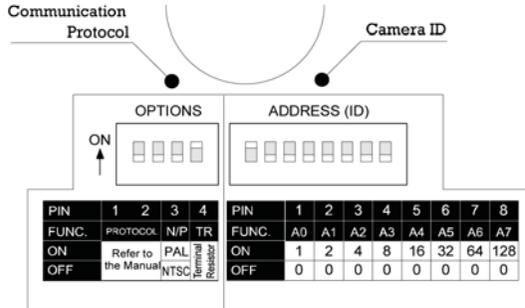

□ Camera ID Setup

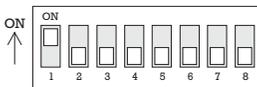

- ID number of camera is set using a binary number. Example is shown bellow.
- The range of ID is 1-255. **Do not use 0 as camera ID.** Factory default of Camera ID is 1.
- If you want to control a certain camera, you must match the camera ID with Cam ID setting of DVR or Controller.


Pin	1	2	3	4	5	6	7	8
ID	1	2	4	8	16	32	64	128
1	on	off						
2	off	on	off	off	off	off	off	off
3	on	on	off	off	off	off	off	off
4	off	off	on	off	off	off	off	off
5	on	off	on	off	off	off	off	off
6	off	on	on	off	off	off	off	off
7	on	on	on	off	off	off	off	off
8	off	off	off	on	off	off	off	off
9	on	off	off	on	off	off	off	off
10	off	on	off	on	off	off	off	off

Pin	1	2	3	4	5	6	7	8
ID	1	2	4	8	16	32	64	128
11	on	on	off	on	off	off	off	off
12	off	off	on	on	off	off	off	off
13	on	off	on	on	off	off	off	off
14	off	on	on	on	off	off	off	off
15	on	on	on	on	off	off	off	Off
16	off	off	off	off	on	off	off	off
17	on	off	off	off	on	off	off	off
18	off	on	off	off	on	off	off	off
19	on	on	off	Off	on	off	off	off
20	off	off	on	off	on	off	off	off

Pin	1	2	3	4	5	6	7	8
ID	1	2	4	8	16	32	64	128
21	on	off	on	off	on	off	off	off
22	off	on	on	off	on	off	off	off
23	on	on	on	off	on	off	off	off
24	off	off	off	on	on	off	off	off
25	on	off	off	on	on	off	off	off
26	off	on	off	on	on	off	off	off
27	on	on	off	on	on	off	off	off
28	off	off	on	on	on	off	off	off
29	on	off	on	on	on	off	off	off
30	off	on	on	on	on	off	off	off

Pin	1	2	3	4	5	6	7	8
ID	1	2	4	8	16	32	64	128
31	on	on	on	on	on	off	off	off
32	off	off	off	off	off	on	off	off
33	on	off	off	off	off	on	off	off
34	off	on	off	off	off	on	off	off
35	on	on	off	off	off	on	off	Off
36	off	off	on	off	Off	on	off	off
37	on	off	on	off	Off	on	off	off
38	off	on	on	off	Off	on	off	off
39	on	on	on	off	Off	on	off	off
40	off	off	off	on	Off	on	off	off

□ Communication Protocol Setup

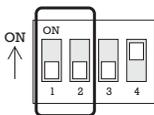


- Select the appropriate Protocol with DIP switch combination.

Switch State		Protocol
P0 (Pin 1)	P1 (Pin 2)	
OFF	OFF	PELCO-D, 2400 bps
ON	OFF	PELCO-D, 9600 bps
OFF	ON	PELCO-P, 4800 bps
ON	ON	PELCO-P, 9600 bps

- If you want to control using DVR or P/T controller, their protocol must be identical to camera. Otherwise, you can not control the camera.
- If you changed camera protocol by changing DIP S/W, the change will be effective after you reboot the camera.
- Factory default of protocol is "Pelco-D, 2400 bps".


□ Reserved for Supplier

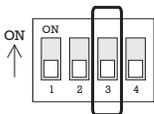

- Pin 3 is only for supplier, **DO NOT CHANGE THESE ITS ORIGINAL STATE**. If you change one of these, proper operation cannot be achieved.

◎ Pin 3 PAL / NTSC system selection of Camera. **DO NOT CHANGE THIS PIN.**

□ Terminal Resistor Setup

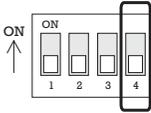

Terminal resistor is used if your system meets one of following two conditional cases.


- **Case1: Control cable between camera and controller is relatively long (1:1 connection)**

If communication cable is very long, the electrical signal will bind in the terminal point. This reflected signal causes signal distortion, resulting in a degradation of camera function. In this case, the terminal resistor of both sides (i.e. camera and controller) must be set to the 'ON' state.

- **Case2: Multiple cameras are controlled at the same time**



Due to similar reasons stated in case 1, the terminal resistors of the controller and the last camera must be set to 'ON' state. The camera with the longest cable length is determined to be the 'last' camera. Do not turn on the terminal resistor of all cameras.

Keyboard Controller / DVR

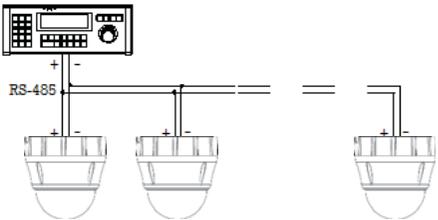


Direct Installation on the Ceiling

- ① To pass cables to upside of ceiling, please make a 2~2.5 inch (50~60mm) hole on the ceiling panel.
- ② Fasten surface mount bracket to ceiling with 4 screws.

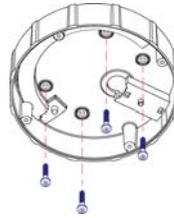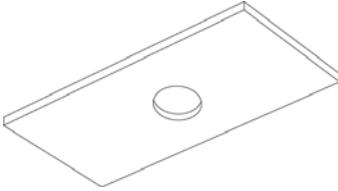

- ③ Wire cables to terminal block and connect the terminal blocks to main unit.
- ④ Fasten main unit to surface mount bracket with 4 lock-up screws.


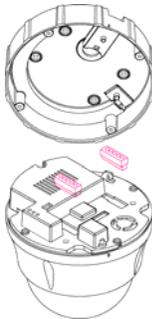


- ⑤ Remove protective vinyl from dome cover .



Installation using Pendant Mount Bracket

- ① Fasten pendant mount bracket to ceiling with 3 screws.
- ② Wire cables to terminals and connect the terminals to main unit. **Do not use surface mount bracket!**

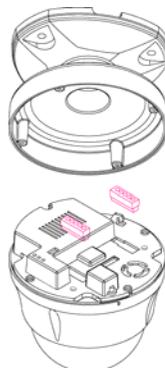
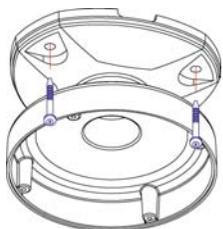


- ③ Fasten main unit to pendant mount bracket with 4 screws.
- ④ Remove protective vinyl from dome cover.





Installation using Wall Mount Bracket

- ① Fasten wall mount bracket to ceiling with 3 screws.
- ② Wire cables to terminals and connect the terminals to main unit. **Do not use surface mount bracket!**

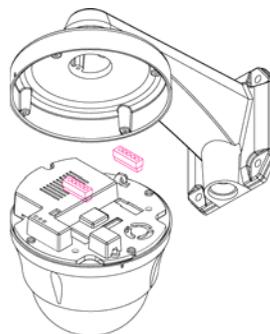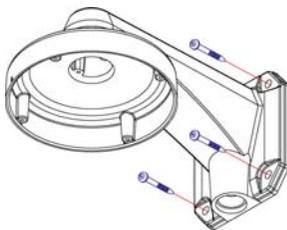


- ③ Fasten main unit to wall mount bracket with 4 screws.
- ④ Remove protective vinyl from dome cover.

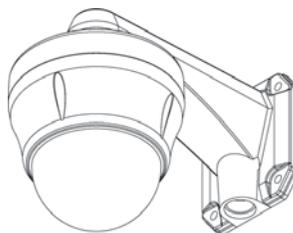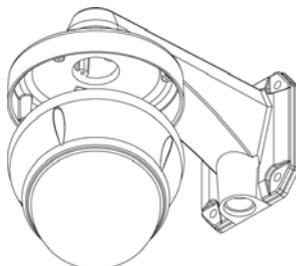


Installation using Flush Mount Bracket


- ① Cut 3 holes in ceiling

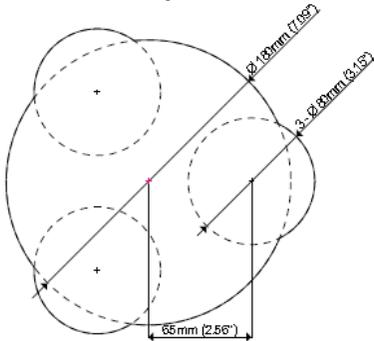


- ② Align main body bracket with flush mount bracket. Fasten with screws.

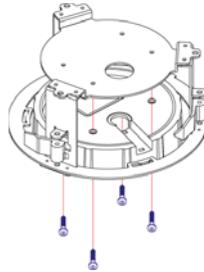


- ③ Connect fall-proof spring to main body hook. Assemble and fasten with screws.

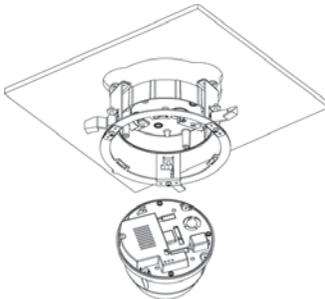


- ④ Put main body and bracket assembly into main hole.

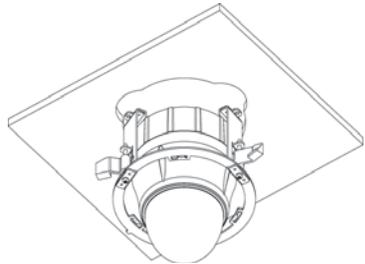



- ⑤ Secure flush mount bracket to the ceiling with screws through the 3 holes on the bracket.

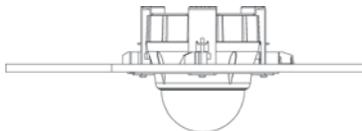

- ⑥ Cover assembly with bracket cover and turn it clockwise.

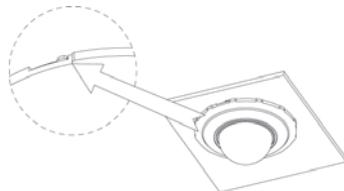

Cabling

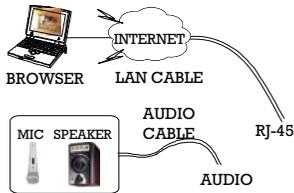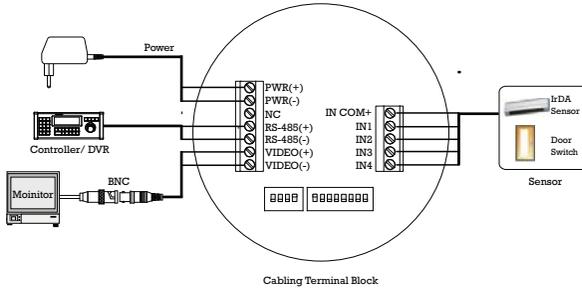

□ Power Connection


- Please check the voltage and current capacity of rated power carefully. Rated power is indicated on the back of main unit.

Rated Power	Input Voltage Range	Current Consumption
DC 12V	DC 11V ~ 18V	1.3 A

□ RS-485 Communication

- For PTZ control, connect this line to keyboard and DVR. To control multiple cameras at the same time, RS-485 communication lines to cameras are connected in parallel as shown below.

Keyboard Controller / DVR

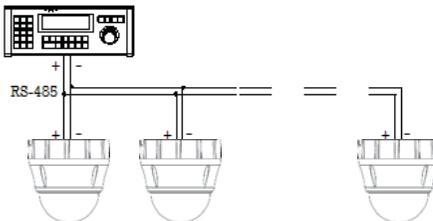




Video Connection

- Connect with BNC coaxial cable.

Alarm Input Connection

- Sensor Input

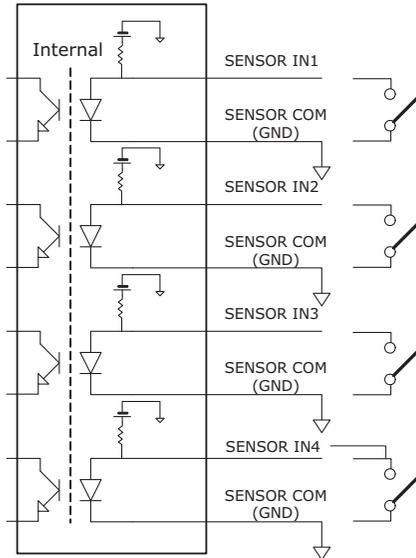

Before connecting sensors, check the sensor driver voltage and output signal type. Since sensor output signal types are divided into Open Collector and Voltage Output types in general, the cabling must be installed properly depending on the signal type.

Signal	Description
COM (GND)	Connect SENSOR COMs to this port(GND) as shown in the circuit above
IN1, IN2, IN3, IN4	Connect output of sensors for each port as shown in the circuit above.

If you want to use Alarm Input, the type of sensor must be selected in OSD menu. The sensor types are Normal Open and Normal Close. If the sensor type is not selected properly, alarm activation will occur opposite of what is desired.

⊙ Normal Open	Output Voltage is high state when sensor is activated
⊙ Normal Close	Output Voltage is high state when sensor is not activated

Chapter 3.

OPERATION

Check Points before Operation

- Before power is applied, please check the cables carefully.
- The camera ID of the controller must be identical to that of the target camera. The camera ID can be checked by reading DIP switch of the camera.
- If your controller supports multi-protocols, the protocol must be changed to match to that of the camera.
- If you changed camera protocol by changing DIP switch, the change will be effective after you reboot the camera.
- Since the operation method can be different for each controller available, refer to the manual for your controller if camera can not be controlled properly. The operation of this manual is based on the standard Pelco® Controller.

Preset and Pattern Function Pre-Check

- Check controller or DVR preset and pattern function operation in advance to take advantage of full camera functions when using controller or DVR.
- Refer to the following table when using standard Pelco® protocol controller.

< Go Preset >	Input [Preset Number] and press [Preset] button.
< Set Preset >	Input [Preset Number] and press [Preset] button for more than 2 seconds.
< Run Pattern >	Input [Pattern Number] and press [Pattern] button.
< Set Pattern >	Input [Pattern Number] and press [Pattern] button for more than 2 seconds.

- If controller or DVR has no pattern button or function, use shortcut keys with preset numbers. For more information, refer to “Reserved Preset” in this manual.

Starting OSD Menu

- **Function** Using the OSD menu, Preset, Pattern, Swing, Group and Alarm Input function can be configured for each application
- **Enter Menu** <Go Preset> [95]

Reserved Preset


- **Description** Some Preset numbers are reserved to special functions.
- **Function**
 - Go Preset [95] : Enters into OSD menu
 - Go Preset [131~134] : Runs Pattern Function 1 ~ 4
 - Go Preset [141~148] : Runs Swing Function 1 ~ 8
 - Go Preset [151~158] : Runs Group Function 1 ~ 8
 - Go Preset [170] : Sets Camera BLC Mode to OFF
 - Go Preset [171] : Sets Camera BLC Mode to ON
 - Go Preset [174] : Sets Camera Focus Mode to AUTO
 - Go Preset [175] : Sets Camera Focus Mode to Manual
 - Go Preset [176] : Sets Camera Focus Mode to SEMI-AUTO
 - Go Preset [177] : Sets Day & Night Mode to AUTO
 - Go Preset [178] : Sets Day & Night Mode to NIGHT
 - Go Preset [179] : Sets Day & Night Mode to DAY
 - Go Preset [190] : Sets OSD Display Mode to AUTO (Except Privacy Mask)
 - Go Preset [191] : Sets OSD Display Mode to OFF (Except Privacy Mask)
 - Go Preset [192] : Setting OSD Display Mode to ON (Except Privacy Mask)
 - Go Preset [193] : Sets all Privacy Mask Display to OFF
 - Go Preset [194] : Sets all Privacy Mask Display to ON

Preset

- **Function** Max. 127 positions can be stored as Preset position. The Preset number can be assigned from 1 to 128, but 95 is reserved for starting OSD menu.
Camera characteristics (i.e. White Balance, Auto Exposure) can be set up independently for each preset. Label should be blank and "Camera Adjust" should be set to "GLOBAL" as default. All characteristics can be set up in OSD menu.
- **Set Preset** <Set Preset> [1~128]
- **Run Preset** <Go Preset> [1~128]
- **Delete Preset** To delete Preset, use OSD menu.

Swing

- **Function** By using Swing function, you can make camera to move between 2 Preset positions repeatedly. When swing function runs, camera moves from the preset assigned as the 1st point to the preset assigned as the 2nd point in CW(Clockwise) direction. Then camera moves from the preset assigned as the 2nd point to the preset assigned as the 1st point in CCW(Counterclockwise) direction.

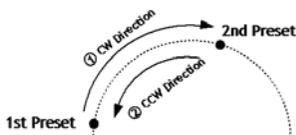

If the preset assigned as the 1st point is the same as the preset assigned as the 2nd point, the camera will turn 360° in a CW (Clockwise) direction, then 360° in a CCW (Counterclockwise) direction.

Speed can be set up from 1°/sec to 180°/sec.

- **Set Swing** To set Swing, use OSD menu.
- **Run Swing** Method 1) <Run Pattern> [Swing NO.+10] ex) Run Swing 3 : <Run Pattern> [13]
Method 2) <Go Preset> [Swing NO.+140] ex) Run Swing 3 : <Go Preset> [143]
- **Delete Swing** To delete Swing, use OSD menu.

Pattern


- **Function** Pattern Function allows the camera to memorize a path (often a curved path) created by controller joystick for an assigned time. The camera will then retrace the path exactly as memorized.

4 Patterns are available and Maximum 1200 communication commands can be stored in a pattern.

- **Set Pattern** Patterns can be created by one of following two methods.

Method 1) <Set Pattern> [Pattern NO.]

- Pattern editing screen is displayed as bellow.

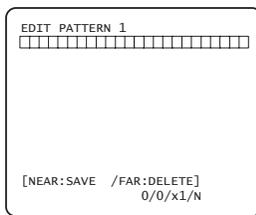

- Movement by Joystick and preset movement can be memorized in a pattern.
- The remaining memory size is displayed in progress bar.
- To save the recording, press **NEAR** key and to cancel, press **FAR** key.

Method 2) OSD Using OSD Menu: See the section "How to use OSD Menu".


- **Run Pattern** Method 1) <Run Pattern> [Pattern NO.] ex) Run Pattern 2 : <Run Pattern> [2]
Method 2) <Go Preset> [Pattern NO.+130] ex) Run Pattern 2: <Go Preset> [132]
- **Delete Pattern** Use OSD menu to delete a Pattern.



Other Functions

- **Power Up Action** This function enables the camera to resume the last action executed before power down. Most actions such as Preset, Pattern, Swing and Group are available for this function, but jog actions cannot be resumed.
- **Auto Flip** If the tilt angle arrives at the top of tilt orbit (90°), zoom module camera will keep moving in the opposite tilt direction (180°) to keep tracing targets. As soon as zoom module camera passes through the top of tilt direction (90°), images will be reversed automatically and the  symbol appears on screen. If this function is set to OFF, tilt movement range is 0 ~ 95°.
- **Parking Action** This function sets the camera to a specific position automatically if operator doesn't operate the controller for a while. The Park Time can be defined as an interval 1/2/3/4/5/6/7/8/9/10/15/30 seconds and 1/2/3/4 minutes.
- **Alarm Input** 4 Alarm Inputs are used. If an external sensor is activated, camera can be set to move to corresponding preset position. Note: the latest alarm input is in effect if multiple sensors are activated.
- **Privacy Zone Mask** To protect privacy, MAX. 4 Privacy Masks can be created in arbitrary locations to hide objects such as windows, shops or private houses. With the Spherical Coordinates system, a powerful Privacy Zone Mask function is available.
- **GLOBAL/LOCAL Image Setup** WB (White Balance) and AE (Auto Exposure) can be set up independently for each preset. There are 2 modes, "Global" mode & "Local" mode. The Global mode means that WB or AE can be set up simultaneously for all presets in the "ZOOM CAMERA SETUP" menu. The Local mode means that WB or AE can be set up independently or separately for each preset in each preset setup menu. Each Local WB/AE value will activate correspondingly as the camera arrives at each preset location.
During jog operation, Global WB/AE values should be applied. All Local WB/AE values will not change although Global WB/AE value changes.
- **SemiAuto Focus** Automatically selects focus mode from Manual Focus or Auto Focus depending on type of operation. Manual Focus mode activates in preset operation and Auto Focus mode activates during jog operation. In Manual mode, Focus data for each preset is memorized in advance, and the camera calls focus data for corresponding presets as soon as it arrives at a preset. This method shortens focus times.
Focus mode changes to Auto Focus mode automatically when jog operation starts.

OSD Display of Main Screen

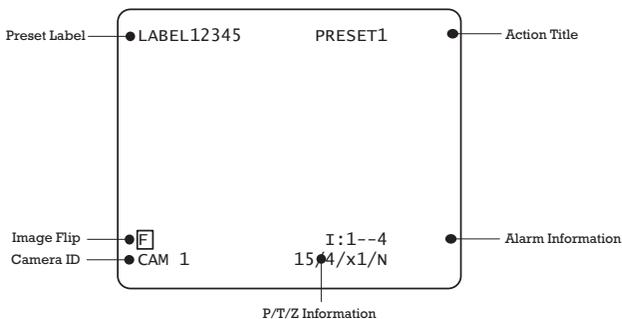

- **P/T/Z Information** Current Pan/Tilt angle in degree, zoom magnification and a compass direction.
- **Camera ID** Current Camera ID(Address).
- **Action Title** Followings are possible Action Titles and their meaning.

"SET PRESET xxx"	When Preset xxx is stored
"PRESET xxx"	When camera reach to Preset xxx
"PATTERN x"	When Pattern x is in action
"SWGx/PRESET xxx"	When Swing x is in action
"UNDEFINED"	When undefined function is called to run
- **Preset Label** The Label stored for specific Preset.
- **Alarm Input** This information shows current state of Alarm Input. If an Input point is **ON** it will show a number corresponding to each point. If an Input point is **OFF**, '-' will be displayed.
Example - if points 2 & 3 of inputs are **ON**, the OSD will show as below:
- **Image Flip** Indicates that images are currently reversed by Auto Flip Function.

Chapter 4.

HOW to USE OSD MENU

General Rules of Key Operation for Menu

- The menu items surrounded with () always have a sub menu.
- At all menu levels, to go into sub menu, press **NEAR** key.
- To go to up one menu level, press **FAR** key.
- To move from items to item in the menu, use joystick in the **Up/Down** or **Left/Right**.
- To change a value of an item, use **Up/Down** of the joystick in the controller.
- Press **NEAR** key to save values and Press **FAR** key to cancel values.

Main Menu


```
SPEED DOME CAMERA
```

```
-----  
-><SYSTEM INFORMATION>  
<DISPLAY SETUP>  
<DOME CAMERA SETUP>  
<SYSTEM INITIALIZE>
```

```
EXIT
```

- System Information Displays system information and configuration.
- Display Setup Enable/Disable of OSD display on Main Screen.
- Dome Camera Setup Configure various functions of this camera.
- System Initialize Initializes system configuration and sets all data to factory default configuration.


Display Setup

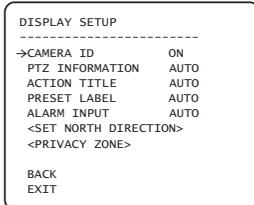

This menu defines Enable/Disable of OSD display on Main Screen. If an item is set to be AUTO, the item is displayed only when the value of it is changed.

- Camera ID [ON/OFF]
- PTZ Information [ON/OFF/AUTO]
- Action Title [ON/OFF/AUTO]
- Preset Label [ON/OFF/AUTO]
- Alarm Input [ON/OFF/AUTO]


□ Compass Direction Setup

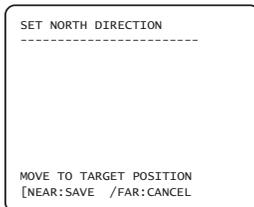

Set North to assign compass direction as criteria. Move camera and press **NEAR** button to save.




Privacy Zone Mask Setup

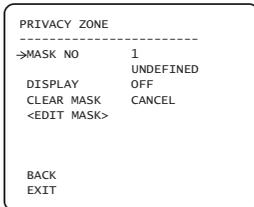

Select area in image to mask.


- Mask No [1~4]
Select Mask number. If the selected mask has already data, camera moves as it was set. Otherwise, "UNDEFINED" will be displayed under "Mask NO".
- Display [ON/OFF]
Sets if camera makes mask shows or not on images.
- Clear Mask [CANCEL/OK]
Deletes data in the selected mask NO.

□ Privacy Zone Area Setup

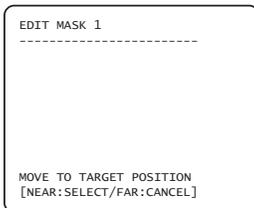

Move camera to area to mask. Then the menu to adjust mask size will be displayed.

□ Privacy Zone Size Adjustment

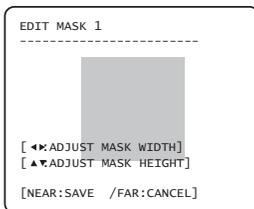


Adjust mask size. Use joystick or arrow buttons to adjust mask size.

- ◀ ▶ (Left/Right)
- ▲ ▼ (Up/Down)



Camera Setup

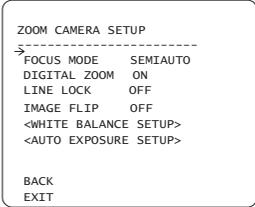

Setup the general functions of zoom camera module.

- Focus Mode [AUTO/MANUAL/SEMAUTO]

Sets camera focus mode.

- SEMIAUTO Mode

Automatically selects focus mode from Manual Focus or Auto Focus depending on type of operation. Manual Focus mode activates in preset operation and Auto Focus mode activates during jog operation. In Manual mode, Focus data for each preset is memorized in advance, and the camera calls focus data for corresponding presets as soon as it arrives at a preset.

- Digital Zoom [ON/OFF]

Sets digital zoom function to ON/OFF. When set to OFF, optical zoom function runs but zoom function stops at the end of optical zoom magnification.


- Line Lock [ON/OFF]

If Line lock sync is ON, video signal is synchronized with AC power. Video can be fluctuated after setting is changed.

- Image Flip [ON/OFF]

Turn watching direction to the other side of moving when camera gets vertical sight.

□ White Balance set up

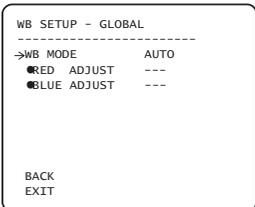

- WB Mode [AUTO/MANUAL]

In Manual mode, Red and Blue level can be set up manually

- Red Adjust [10~60]

- Blue Adjust [10~60]

□ Auto Exposure Setup

AE SETUP - GLOBAL	
→BACKLIGHT	OFF
DAY/NIGHT	AUTO1
BRIGHTNESS	25
IRIS	AUTO
SHUTTER	ESC
AGC	NORMAL
SSNR	MIDDLE
SENS-UP	<AUTO>
BACK	
EXIT	

- **Backlight** [ON/OFF]
Sets Backlight Compensation
- **Day/Night** [AUTO1/AUTO2/DAY/NIGHT]
AUTO1 exchanges Day/Night mode faster than AUTO2.
- **Brightness** [0~100]
Adjusts brightness of images. Iris, Shutter Speed and Gain are adjusted automatically in correspondence with this value.
- **IRIS** [AUTO/MANUAL(0~100)]
If Iris is set to Auto, Iris should have highest priority in adjusting AE and Shutter Speed should be fixed.
If Iris is set to Manual, Iris should be fixed and Iris has lower priority in adjusting AE, in comparison with others.
- **Shutter Speed** [ESC/A.Flicker/Manual(×128~1/120000 sec)]
If Iris is set to Manual and Shutter Speed is set to ESC, Shutter Speed should have highest priority. If Shutter Speed is set to A.Flicker, to remove Flicker, Shutter Speed should be set to 1/100 sec. for NTSC and 1/120 for PAL.
- **AGC** [OFF/NORMAL/HIGH]
Enhances image brightness automatically in case that luminance level of image signal is too low.
- **SSNR** [OFF/LOW/MIDDLE/HIGH]
Enhances images by filtering noise when gain level of images is too high.
- **SENS-UP** [AUTO(2~128)/OFF]
Activates Slow Shutter function when luminance of image (signal) is too dark.
It is possible to set up the maximum number of frames stacked on one another by Slow Shutter function.

Motion Setup

```

MOTION SETUP
-----
->MOTION LOCK      OFF
PWR UP ACTION     ON
AUTO FLIP         ON
JOG MAX SPEED     120/SEC
JOG DIRECTION     INVERSE
FRZ IN PRESET     OFF
<PARKING ACTION SETUP>
<ALARM INPUT SETUP>
BACK
EXIT
  
```

Setup the general functions of Pan/Tilt motions.

- Motion Lock [ON/OFF]

If Motion Lock is set to ON, it is impossible to set up and delete Preset, Swing, Pattern and Group. It is only possible to run these functions. To set up and delete these functions, enter into OSD menu.
- Power Up Action [ON/OFF]

Refer to "Other Functions" section.
- Auto Flip [ON/OFF]

Refer to "Other Functions" section.
- Jog Max Speed [1°/sec ~360°/sec]

Sets maximum jog speed. Jog speed is inversely proportional to zoom magnification. As zoom magnification goes up, pan/tilt speed goes down.
- Jog Direction [INVERSE/NORMAL]


If you set this to 'Inverse', the view on the screen will move in the same direction as jog tilt. If 'Normal' is selected, the view on the screen will move in the opposite direction.
- Freeze in Preset [ON/OFF]

At start point of preset movement, camera will freeze the image of start point. Camera keeps displaying the image of start point during preset movement and does not display the images received during preset movement. As soon as camera stops at preset end point, camera will display live images received at the preset end point.

Availability of this function will vary by model.




□ Parking Action Setup

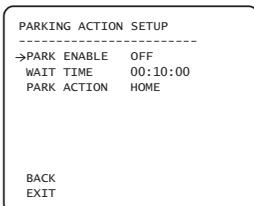

If Park Enable is set to ON, camera runs assigned function automatically if there is no PTZ command during assigned "Wait Time".

- Park Enable [ON/OFF]
- Wait Time [1~10/15/30 seconds & 1/2/3/4 minutes]
The time is displayed with "hh:mm:ss" format and can be changed in 1 min units.
- Park Action [HOME/PRESET/PATTERN/SWING/GROUP]
○ HOME
Camera moves to home position if there is no PTZ command during assigned "Wait Time".

□ Alarm Input Setup

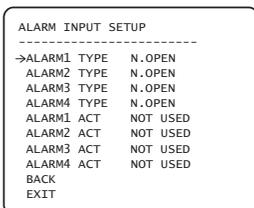


Matches the Alarm sensor input to one of Preset positions. If an external sensor is activated, camera will move to corresponding preset position when this item is predefined.

- Alarm × Type [Normal OPEN/Normal CLOSE]
Sets sensor input type.
- Alarm × Action [NOT USED/PRESET 1~128]
Assign counteraction Preset position to each Alarm input.



Preset Setup

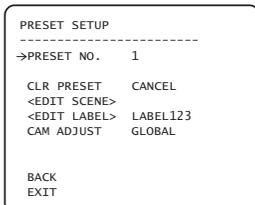

● **Preset Number** [1~128]


If a selected preset is already defined, camera moves to pre-defined position and preset characteristics such as Label and Relay Outputs show on monitor. If a selected preset is not defined, "UNDEFINED" shows on monitor.

● **Clear Preset** [CANCEL/OK]

Delete current Preset data

● **Edit Preset Scene** Redefine current Preset scene position (i.e. PTZ).

□ Edit Preset Scene

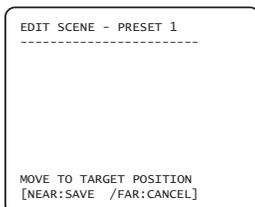

- ① Using Joystick, move camera to desired position.
- ② By pressing **NEAR** key, save current PTZ data.
- ③ Press **FAR** key to cancel.



Swing Setup

SWING SETUP	

→SWING NO.	1
1ST POS.	NOT USED
2ND POS.	NOT USED
SWING SPEED	30/SEC
CLEAR SWING	CANCEL
BACK	
EXIT	

- **Swing Number** [1~8]

Select Swing number to edit. If a selected Swing is not defined, "NOT USED" is displayed in 1st Position and 2nd Position

- **1st Position** [PRESET 1~128]

- **2nd Position**

Set up the 2 position for Swing function. If a selected preset is not defined, "UNDEFINED" will be displayed as shown below.

SWING SETUP	

SWING NO.	1
1ST POS.	PRESETS
2ND POS.	NOT USED
	UNDEFINED

When swing function runs, the camera will move from the preset assigned as the 1st point to the preset assigned as the 2nd point in a CW (Clockwise) direction. Then the camera will move from the preset assigned as the 2nd point to the preset assigned as the 1st point in a CCW (Counterclockwise) direction. If the preset assigned as the 1st point is same as the preset assigned as the 2nd point, the camera will turn 360° in CW direction and then turn 360° in CCW direction.

- **Swing Speed** [1°/sec ~180°/sec]


Sets Swing speed from 1°/sec to 180°/sec.

- **Clear Swing** [CANCEL/OK]

Deletes current Swing data.




Pattern Setup

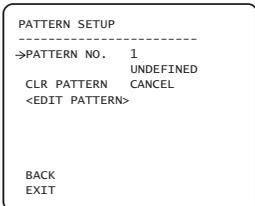


- **Pattern Number** [1~4]
Selects Pattern number to edit.
If a selected pattern number is not defined, "UNDEFINED" will be displayed under selected pattern number.
- **Clear Pattern** [CANCEL/OK]
Deletes data in current pattern
- **Edit Pattern** Starts editing pattern.

□ Edit Pattern

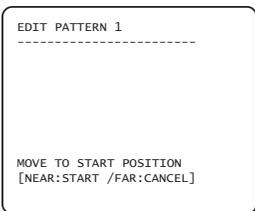


① Using Joystick, move to start position with appropriate zoom. To start pattern recording, press **NEAR** key. To exit this menu, press **FAR** key.

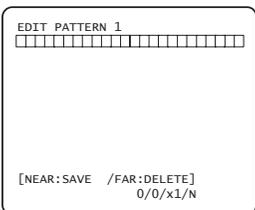

② Move camera with controller joystick or run preset function to memorize a path (often a curved path) in a selected pattern. The total memory size and remaining memory size are displayed in the form of a bar. Maximum 1200 communication commands can be stored in a pattern.


③ To save data and exit, press **NEAR** key. To cancel recording and delete record data, press **FAR** key.

Group Setup

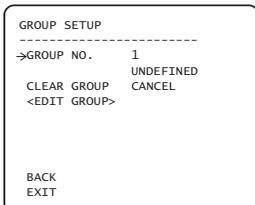


- **Group Number** [1~8]
Selects Group number to edit.
If a selected Group number is not defined, "UNDEFINED" will be displayed under selected Group number.
- **Clear Group** [CANCEL/OK]
Deletes data in current Group
- **Edit Group** Starts editing Group.


EDIT GROUP

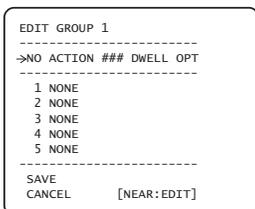

① " Press **Near** key in "NO" list to start Group setup.

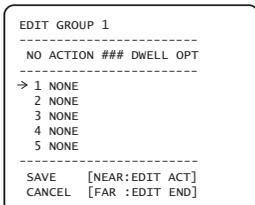

② Note that **MAX. 20** Functions are allowed in a Group. Move cursor up/down and press **Near** key to set up.

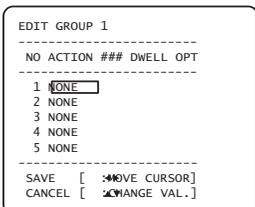

③ Set up Action, Dwell time and Option. Note that selected item is displayed in reverse. Move cursor **Left/Right** to select items and move cursor **Up/Down** to change each value.

- **Action ###** [NONE/PRESET/SWING/PATTERN]
- **DWELL** [0 second ~ 4 minutes]
Sets Dwell Time between functions
- **OPT** Option. Displays the preset speed when preset is set in Action. Displays the number of repeats when Pattern or Swing is selected in Action

```

EDIT GROUP 1
-----
NO ACTION ### DWELL OPT
-----
1 PRESET 1 00:03 360
2 NONE
3 NONE
4 NONE
5 NONE
-----
SAVE [  →MOVE CURSOR]
CANCEL [  ↵CHANGE VAL.]

```

- ④ Set up items such as Action, ###, Dwell and OPT.

```

EDIT GROUP 1
-----
NO ACTION ### DWELL OPT
-----
→ 1 PRESET 1 00:03 360
2 NONE
3 NONE
4 NONE
5 NONE
-----
SAVE [NEAR:EDIT ACT]
CANCEL [FAR :EDIT END]

```

- ⑤ After finishing setup of an Action, press **Near** key to one-upper-level menu(Step ②). Move cursor **Up/Down** to select Action number and repeat Step ② ~ Step ④ to edit selected Group.

```

EDIT GROUP 1
-----
NO ACTION ### DWELL OPT
-----
1 PRESET 1 00:03 360
2 NONE
3 NONE
4 NONE
5 NONE
-----
→SAVE
CANCEL

```

- ⑥ After finishing setup of all Actions, press **FAR** key to exit. Then cursor should be moved to "SAVE". Press **Near** key to save data.

System Initialize

SYSTEM INITIALIZE	
->CLR ALL DATA	NO
● CLR DISPLAY SET	NO
● CLR CAMERA SET	NO
● CLR MOTION SET	NO
● CLR EDIT DATA	NO
REBOOT CAMERA	NO
REBOOT SYSTEM	NO
BACK	
EXIT	

- **Clear All Data** Deletes all configuration data such as display, camera, motion setup and so on.
- **Clear Display Set** Initializes Display Configuration
- **Clear Camera Set** Initializes Camera Configuration
- **Clear Motion Set** Initializes Motion Configuration
- **Clear Edit Data** Deletes Preset Data, Swing Data, Pattern Data and Group Data
- **Reboot Camera** Reboots Zoom Camera module
- **Reboot System** Reboots Speed Dome Camera

Initial Configuration Table

● Display Configuration		● Camera Configuration	
Camera ID	ON	Focus Mode	SemiAuto
PTZ Information	AUTO	Digital Zoom	ON
Action Title	AUTO	Line Lock	OFF
Preset Label	AUTO	White Balance	AUTO
Alarm Input	AUTO	Backlight	OFF
North Direction	Pan 0°	Day&Night	AUTO2
Privacy Zone	Undefined	Brightness	25
● Motion Configuration		Iris	AUTO
Motion Lock	OFF	Shutter	ESC
Power Up Action	ON	AGC	HIGH
Auto Flip	ON	SSNR	MIDDLE
Jog Max Speed	120°/sec	SENS-UP	AUTO
Jog Direction	INVERSE	● User Edit Data	
Freeze In Preset	OFF	Preset 1~128	Undefined
Park Action	OFF	Swing 1~8	Undefined
Alarm Action	OFF	Pattern 1~4	Undefined
		Group 1~8	Undefined

Chapter 5.

REMOTE VIDEO MONITORING

Remote Video Monitoring

There are two ways to view video between the site and center system. In order for a proper operation, an IP address must be set accordingly.

Default ID : admin	Default Password : 1234
---------------------------	--------------------------------

❑ Video Monitoring using Internet Explorer

If an encoder's IP address is entered on the Internet Explorer, the system will ask for confirmation to install Active-X control. Once authorized, the Internet Explorer will start to display video images from the encoder as shown below.

http://192.168.10.100



□ Remote controller in live view



-View Size : Change screen size according to your monitor.
Default value is 'x1' and this means original size.

-Moving control : place your mouse in the circle and click. PTZ moves on that way

-Zoom In/Out(Tele/Wide) : zoom in & out current watching.
-HOME : Move to home position. *for more details, see 'Motion Setup->Park Action' setup.

-Focus Near/Far & auto focus button : only works on 'Manual focus' setup. *Not working if it is on 'auto focus' status'.

-IRIS Close/Open & Auto Iris : Close Iris on high light condition and open in low.

-MENU ON : display text menu of IP CAMERA

-Enter : Enter selected menu. (SAVE)

-ESC : cancel current setting and exit to previous page

Set preset position : 1. Place camera on your desired place. 2. Select preset number. 3. Press set.

Move to preset position : 1. Choose preset number, 2. Press 'GOTO' button. *use 'clear' button to remove preset position

Select the number of tour and type(pattern, Swing, Group) * this should be defined first in each menu(see operation page, pattern, Swing, Group)

Snapshot : snapshot on current live image as still cut.

Talk : voice talk over connected devices. * Camera only can send sound to client. To hear the sound from camera, you should connect microphone on camera and speaker on Remote.

Initialize IP address

If a system IP address is lost, the system can be reset to the system default IP address using the reset button in the back side of the system.

- ① While system is in operation, press the reset button for more than 5 seconds.
- ② The system will reboot automatically
- ③ Once the system reboots, IP address will be set to the system default as below.


• IP mode	Fixed IP	• IP address	192.168.10.100
• Subnet mask	255.255.255.0	• Gateway	192.168.10.1
• Base port	2222	• HTTP port	80

IP finder in remote client

To use IP camera over network, you should set IP address first on your IP camera.

- Prepare Network cable
- Connect to available Network port.
- Find IP address of the network camera with IP installer or IP remote s.w
 - * IP installer : Find IP address of registered device, update and web connection

□ IP finder

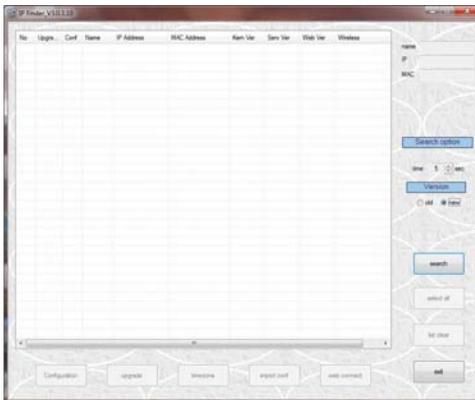

IP finder searches all available devices on connected network.

(Available menu is differ to each model)

To find your device, click 'Search' button and then you can do following process.


- Configuration : Change IP address
- Upgrade : upgrade firmware
- Time zone : change time zone
- import setup : import setup configuration files
- Web connection : Connect through I.explorer.

After Searching, select a device and change IP address according to your network information and connect through 'Web Connect'.

IP Finder Configuration

❑ Configuration

In Configuration page, user can setup connection type and IP address information.

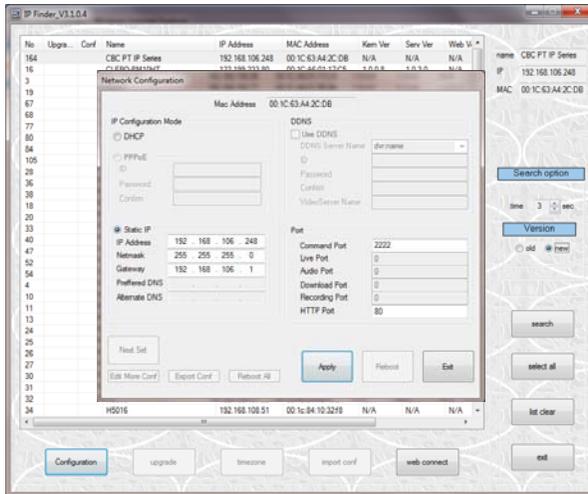

- DHCP : Once you select DHCP, it disables IP address information field. To use this option, you must check your network support DHCP.
- PPPoE : Use this option when you use WAN service. To use WAN service, you need ID & Password from your service provider.
- Static IP : if you know all IP information, select this option.
- Use DDNS : check this option when you use DDNS service.
- Port : shows port numbers which required in communication.

❑ Web connect

Access directly to camera with Internet Explorer and user can do remote setup. See more details on next page.

Use Internet Explorer

The server can be configured using web browser. Type IP address in the address input area of Internet Explorer, then a live viewing screen will be displayed. Press **Setup** button located in the upper right area of the monitoring screen, then the setup page for server setup will be displayed.




The configurations are grouped into 8 categories: **System, Video, Audio, Network, Serial, Event, Preset** and **User**. Any configuration changes are not applied until **Apply** is pressed. Leaving the page without pressing **Apply** button, changes in the page will be discarded.


System

<input type="checkbox"/> Video Standard	Select NTSC or PAL
<input type="checkbox"/> System ID	Alphanumeric System ID to be transferred to remote software
<input type="checkbox"/> Language	Language to be used for web-based configuration(English, Japanese and Korean)
<input type="checkbox"/> Firmware version	Current firmware version
<input type="checkbox"/> Start Time	Latest system boot date and time
<input type="checkbox"/> Current Time	Enter a new date and time and press Set Current Time button to update date & time
<input type="checkbox"/> Time Zone	Select time zone of where the system is installed. Depending on the time zone, Daylight Saving Time will work automatically
<input type="checkbox"/> Automatically synchronize with NTP server	Synchronize system time with an NTP server using NTP(network time protocol). Name of the NTP server should be registered on NTP server Name.
<input type="checkbox"/> Reboot Server	Pressing Reboot Server button will cause the system to reboot. Do not press the Reboot button unless the server needs a reboot.
<input type="checkbox"/> Factory Reset	Back to default(factory default)

Video

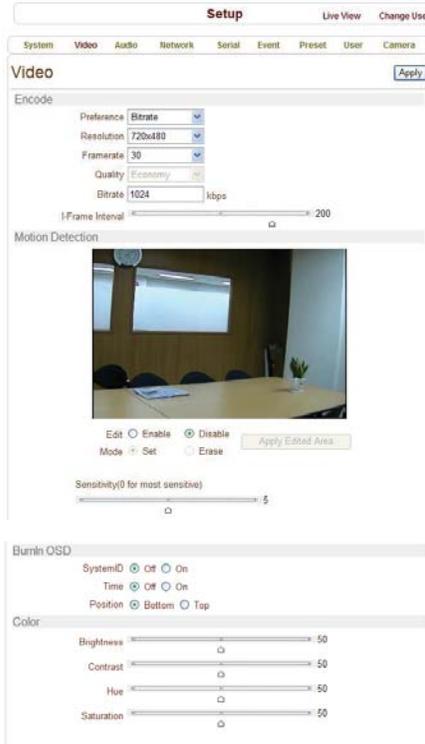

<p><input type="checkbox"/> Preference</p>	<p>Preference in video compression and transmission: With 'Bitrate' selected, the video compression will be effected by the 'Bitrate' value entered. With 'Quality' selected, the video compression will be effected by the quality of image selected. Therefore, 'Bitrate' and 'Quality' corresponds to CBR and VBR respectively</p>
<p><input type="checkbox"/> Resolution</p>	<p>Selectable video compression resolution: NTSC: 720×480, 720×240, 352×480, 352×240 PAL: 720×576, 720×288, 352×576, 352×288</p>
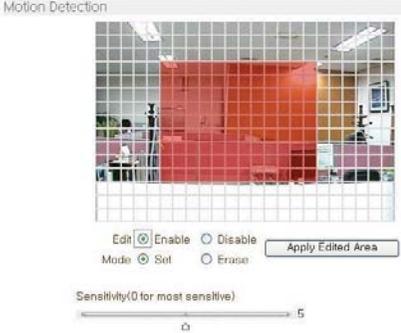
<input type="checkbox"/> Frame rate	Selectable video frame rate: Determine the maximum number of frames of video images to compress. The frame rate of actually transmitted video can be affected by the network bandwidth limitation
<input type="checkbox"/> Quality	The selection is possible with Preference is set to 'Quality'
<input type="checkbox"/> Bitrate	The value is applicable when Preference is set to 'Bit rate'
<input type="checkbox"/> I-Frame Interval	Possible values between 0 and 255. There will be no I-frames if 0 is selected.
<input type="checkbox"/> Motion Detection Area Editing	Configure regions for motion detection. Regions of arbitrary shape can be configured by the following steps. <ol style="list-style-type: none"> ① Enable Edit item. ② Select editing Mode. Set is for including cells to motion detection region and Erase is for excluding. ③ Select cells using the left button of the mouse. Multiple cells can be selected conveniently by press and dragging. ④ Press Apply Edited Area to save the editing. <div style="text-align: center;">  </div>
<input type="checkbox"/> Sensitivity	A condition to trigger an event with motion detection. The value determines the sensitivity of the motion detection within a block: the smaller, the more sensitive
<input type="checkbox"/> Brightness	Controls input video brightness by selecting values between 0 and 100.
<input type="checkbox"/> Contrast	Controls input video contrast by selecting values between 0 and 100
<input type="checkbox"/> Hue	Controls input video Hue by selecting values between 0 and 100
<input type="checkbox"/> Saturation	Controls input video saturation by selecting values between 0 and 100.
<input type="checkbox"/> Burn-in OSD	Inserts system ID and date/time in the compressed video. Separately System ID and Time can be turned On or Off in the video. Position specifies the position of such data

Audio

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Audio

Apply

Mode

Mode Off Tx-only Rx-only Tx & Rx

Input Gain

Input Gain

 25

<input type="checkbox"/> Mode	Select audio operation mode <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <thead> <tr> <th style="width: 50%;">Mode</th> <th style="width: 50%;">Action</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Off</td> <td style="text-align: center;">No operation</td> </tr> <tr> <td style="text-align: center;">Tx-Only</td> <td style="text-align: center;">Transmit only</td> </tr> <tr> <td style="text-align: center;">Rx-Only</td> <td style="text-align: center;">Receive only</td> </tr> <tr> <td style="text-align: center;">Tx & Rx</td> <td style="text-align: center;">Transmit and Receive</td> </tr> </tbody> </table>	Mode	Action	Off	No operation	Tx-Only	Transmit only	Rx-Only	Receive only	Tx & Rx	Transmit and Receive
Mode	Action										
Off	No operation										
Tx-Only	Transmit only										
Rx-Only	Receive only										
Tx & Rx	Transmit and Receive										
<input type="checkbox"/> Input Gain	Set audio input gain										



Network

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Network Apply

Local

IP Mode Fixed IP

Local IP 122.199.233.64

Local Gateway 122.199.233.1

Local Subnet 255.255.255.0

DNS

Obtain DNS server address automatically
 Use the following DNS server addresses

Primary DNS Server 164.124.101.2

Secondary DNS Server 168.126.63.1

Port

Base Port 2222

HTTP Port 80

RTSP Port 554

RTSP Authentication

RTSP Authentication Off On

RTP Session

Use RTP Session Off On

Destination IP 0.0.0.0

Destination Port 0

User Name

File Name

SNMP

SNMP Listen port 161

SNMP Trap Destination IP 0.0.0.0

SNMP Trap Destination Port 162

Bitrate Control

Flow Control Mode Min Max Adjust Off

Address Information

Current IP 122.199.233.64

Current Domain Not RegisteredB

MAC Address 00:1C:63:A4:2C:DB

Connecting

<input type="checkbox"/> IP Mode	<p>Three IP modes are supported. Depending on the selected mode, further configuration items come as follows.</p> <table border="1" data-bbox="345 235 945 368"> <thead> <tr> <th>IP Mode</th> <th>Selection</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td rowspan="3">Fixed IP</td> <td>Local IP</td> <td>Fixed IP address</td> </tr> <tr> <td>Local Gateway</td> <td>Gateway IP address</td> </tr> <tr> <td>Local Subnet</td> <td>Subnet mask</td> </tr> </tbody> </table> <p><small>ⓘ Please ask an IP address information from ISP provider or network manager</small></p>	IP Mode	Selection	Description	Fixed IP	Local IP	Fixed IP address	Local Gateway	Gateway IP address	Local Subnet	Subnet mask
IP Mode	Selection	Description									
Fixed IP	Local IP	Fixed IP address									
	Local Gateway	Gateway IP address									
	Local Subnet	Subnet mask									
<input type="checkbox"/> DNS	Set DNS server IP address.										
<input type="checkbox"/> PORT	<p>Base Port : communication port for each connection. HTTP Port : web port(Default is 80) RTSP Port : default 554</p>										
<input type="checkbox"/> RTSP Auth.	Use when you need RTSP authentication										
<input type="checkbox"/> RTSP Session	Communication protocol setup for RTSP use.										
<input type="checkbox"/> SNMP	Communication protocol to detect network status										
<input type="checkbox"/> Bitrate control	<p>When several clients connect to a server, bandwidths of networks clients may differ and some clients may not receive encoded stream fully. To handle such situation, three flow control modes which can be chosen according to users' preference are provided</p> <table border="1" data-bbox="345 749 945 1016"> <thead> <tr> <th>Mode</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Min</td> <td>The bitrate is automatically adjusted to a client with smallest network bandwidth</td> </tr> <tr> <td>Max</td> <td>The bitrate automatically adjusted to a client with largest network bandwidth size. When set to this mode, a client with smaller bandwidth will not receive all frames of video</td> </tr> <tr> <td>Adjust</td> <td>The bitrate is adjusted to most optimum rate by learning the network bandwidth</td> </tr> <tr> <td>Off</td> <td>Flow control is off</td> </tr> </tbody> </table>	Mode	Description	Min	The bitrate is automatically adjusted to a client with smallest network bandwidth	Max	The bitrate automatically adjusted to a client with largest network bandwidth size. When set to this mode, a client with smaller bandwidth will not receive all frames of video	Adjust	The bitrate is adjusted to most optimum rate by learning the network bandwidth	Off	Flow control is off
Mode	Description										
Min	The bitrate is automatically adjusted to a client with smallest network bandwidth										
Max	The bitrate automatically adjusted to a client with largest network bandwidth size. When set to this mode, a client with smaller bandwidth will not receive all frames of video										
Adjust	The bitrate is adjusted to most optimum rate by learning the network bandwidth										
Off	Flow control is off										
<input type="checkbox"/> Address Info	<p>Display network related information</p> <table border="1" data-bbox="345 1070 945 1271"> <tbody> <tr> <td>IP Address</td> <td>The server own IP address. This information is useful when the server's IP mode is set to DHCP</td> </tr> <tr> <td>Current Domain</td> <td>In case the server is registered with DDNS server, the registered domain name is displayed</td> </tr> <tr> <td>MAC Address</td> <td>Display the MAC address of the server. In case the server is registered with DDNS server, the MAC address is used in DDNS registration</td> </tr> </tbody> </table>	IP Address	The server own IP address. This information is useful when the server's IP mode is set to DHCP	Current Domain	In case the server is registered with DDNS server, the registered domain name is displayed	MAC Address	Display the MAC address of the server. In case the server is registered with DDNS server, the MAC address is used in DDNS registration				
IP Address	The server own IP address. This information is useful when the server's IP mode is set to DHCP										
Current Domain	In case the server is registered with DDNS server, the registered domain name is displayed										
MAC Address	Display the MAC address of the server. In case the server is registered with DDNS server, the MAC address is used in DDNS registration										

Serial

This page is used only for developer and test purpose. In this page, user can define serial connection of camera and this is only used when user control camera as RS485 telemetry. No available in IP connection control

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Serial

Apply

RS-485 Port

Protocol RS-485

Bitrate 2400bps

Data Bit 8Bits

Parity None

Stop Bit 1Bits

PTZ

PTZ Type Pelco-D

PTZ ID 1

PTZ Port RS-485

<input type="checkbox"/> RS485 port	Set connection type with each connection information. To get detail of RS-485 connection, refer to PTZ camera's instructions.
<input type="checkbox"/> PTZ	Set PTZ type and ID according to configured setup.

*Serial communication information should be synchronized to Analog camera communication setup.

Event

In this page, user can define alarm activity and notification from local to remote.

Setup
Live View
Change User

System
Video
Audio
Network
Serial
Event
Preset
User

Event Apply

Local

On Motion E-mail FTP No Preset ▼

On Disconnect

On Disconnect E-mail FTP No Preset ▼

E-mail Notification

Server Address

Port

Sender Address

Authentication on SMTP server Off On

ID

Password

Destination Address

Video Clip Attaching Off On

Before testing e-mail, please apply your configuration first.

FTP Upload

Server Address

Port

ID

Password

Continuous Upload Off On

Upload Duration sec (Max 300)

Upload Interval sec (Max 3600)


Event Record

Pre-event Time ▼

Post-event Time ▼

<input type="checkbox"/> Local	Define what type of reaction in local followed by each event. There are E-mail, FTP and Move to preset position option.
<input type="checkbox"/> On Disconnect	Define what type of reaction will be on when system is disconnected.
<input type="checkbox"/> E-mail Notification	Set mail server information to send out e-mail to specified user. Check if you will include Video Clip or not.
<input type="checkbox"/> FTP upload	Set FTP server to upload event triggered image data.
<input type="checkbox"/> Event Record	Set PRE & POST Recording time and POST Event type.

Preset

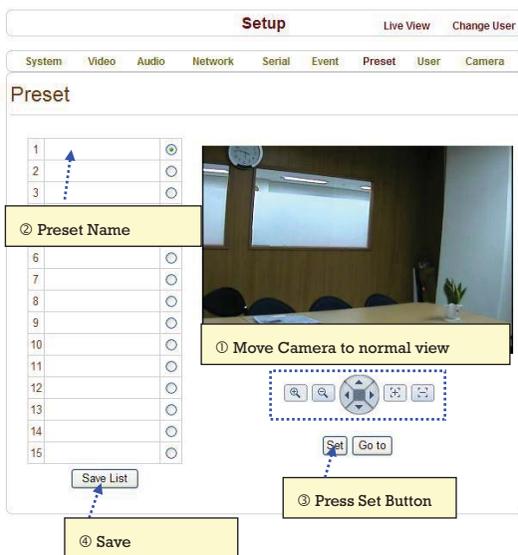

❑ Preset Configuration

Set the PTZ Presets by following the next steps.

- ① Move cameras to desired view using PTZ control buttons.
- ② Enter Preset name.
- ③ Press **Set** button.
- ④ Once all the presets are set, press **Save List** button.

❑ Move to Preset Position

Select a preset from the Preset and press **Go To** button, then, the camera will move to the selected preset position.

User

User can be registered and authority level of a user can be specified. User configuration is allowed only to admin user. MAX. 16 users can be registered and each user can have one of four authorities.

Authority Level	Allowed Operations	Remarks
Admin	All operations	User ID = admin
Manager	All operations except for user configuration	
User	Live viewing and PTZ control	
Guest	Live viewing only	

□ Add User

Page for adding a user comes on pressing **Add** button.

User ID and password need to be entered and privilege level need to be selected. User ID and password consist of alphanumeric string of MAX. 15characters.

❑ **Delete User**

A user is deleted by pressing **Delete** button.

❑ **Change Password**

Pressing **Modify Password** button after selecting a user shows a page for changing password. In case of changing admin password, the old password is checked.

❑ **Modify Privilege Level**

Pressing **Modify Privilege** button after selecting a user shows a page for changing the authority. It is not allowed to change the authority level of admin user.

❑ **Login Policy**

Skip Login is provided for convenient access to the server when authentication is not required. When **Skip Login** is set to Enable, login step is skipped. The privilege level after login in this way is determined by the setting of **Privilege Level After Login Skipped**.

Chapter 6.

SPECIFICATION



Specifications


Network	Network Interface	Ethernet 10/100 Base-T(RJ45)	
	Network Protocol	TCP/IP,UDP, Multicast, DHCP, PPPoE, SMTP, HTTP, SNMP	
Video	Standard	H.264	
	Data Rate	32Kbps ~ 4Mbps	
	Resolution	NTSC : 720×480, 720×240, 352×480, 352×240	
		PAL : 720×576, 720×288, 352×576, 352×288	
	Max Frame Rate	NTSC : Max. 30fps	PAL : Max. 25fps
	Frame Rate Range	NTSC : 0.2 ~ 30fps	PAL : 0.2 ~ 25fps
Motion Detection	Sensitivity adjustable		
Audio	Standard	G.711	
	Sample Rate	8KHz	
	Data Rate	64Kbps	
	Input	1 Line-In (Mini-Stereo)	
	Output	1 Line-Out (Mini-Stereo)	
Video Access from Web-Browser		Camera Live View & Audio/Video snapshot, PTZ control, Remote Setup, Remote Upgrade	
Security		Multiple user access levels with password protection, IP address filtering, HTTPS encryption, IEEE 802.1x authentication	
CMS	Live Monitoring	Max 36 Channel Monitoring simultaneously	
		PTZ Control Event Monitoring Bi-directional Audio communication	
	Search/Playback	Time/Camera-Base/Event-Base Multi-channel viewing of recorded status on timeline	
Backup	Export to AVI file		
	Snapshot to BMP file		

Model		PT110N
Video Signal System		NTSC
Camera	CCD	1/4" Interline Transfer CCD
	Max. Pixels	811(H)×508(V) 410K
	Effective Pixels	768(H)×494(V) 380K
	Horizontal Res.	500 TV Line(Color), 570 TV Line(B/W)
	S/N Ratio	50 dB (AGC Off)
	Zoom	×10 Optical Zoom, ×10 Digital Zoom
	Focal length	F1.8, f=3.8-38mm
	Min. illumination	0.7 Lux (Color) / 0.02 Lux (B/W), 50 IRE
	Day & Night	Auto / Day / Night(ICR)
	Focus	Auto / Manual / SemiAuto
	Iris	Auto / Manual
	Shutter Speed	x128 ~ 1/120000 sec
	AGC	Normal / High / Off
	White Balance	Auto / Manual(Red, Blue Gain Adjustable)
	BLC	Low / Middle / High / Off
Flickerless	Selectable	
SSNR	Low / Middle / High / Off	
Pan/Tilt	Range	Pan : 360°(Endless)
		Tilt : 180° (Auto-Flip), 95° (Normal)
	Pan/Tilt Speed	Preset : 360°/sec
		Manual : 0.05 ~ 360°/sec (proportional to zoom)
		Swing : 1~ 180°/sec
	Preset	127 Preset (Label, Camera Image Setting)
	Pattern	4 Pattern, 1200 commands(about 5 minute)/Pattern
	Swing	8 Swing
Group	8 Group (20 action entities per Group)	
Other Functions	Auto Flip, Auto Parking, Power Up Action etc.	
General	Communication	RS-485
	Protocol	Pelco-D, Pelco-P selectable
	Privacy Zone	4 Zone
	Alarm Input	4 Input
	OSD	Menu / PTZ information etc
	Rated Power**	DC Type : DC 12V / 1.3A
	Dimension	Dome : ∅115
		Housing : ∅184.5 × 158.5(H) mm
Weight	about 1.3 Kg	
Operating Temp.	0°C ~ 40°C	

* Specifications of this product are subject to change without notice.

** Check the voltage and current capacity of rated power carefully.


■ Appearance

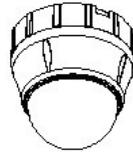


Main Unit



Pendant Mount

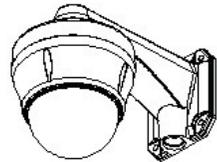


Wall Mount

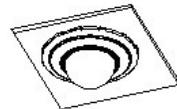


Flush Mount

Dimension


● Main Unit & Surface Mount Bracket

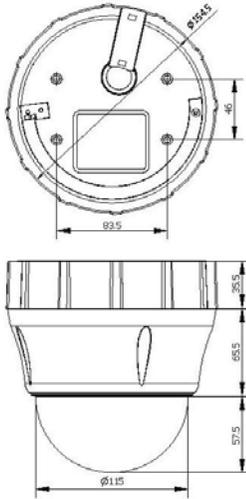

● Pendant Mount Bracket

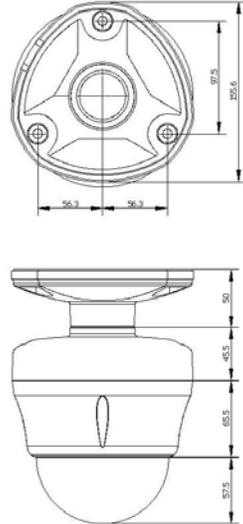

● Wall Mount Bracket

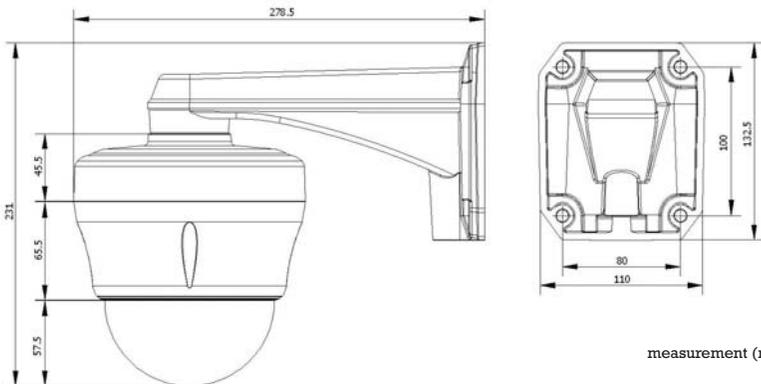

measurement (mm)